

We've got
your back.

This is
SLOUCH.

Core Height Adjustable Desk

[User Guide](#)

The soundtrack
to your ideal
everyday...

This is the start of living
effortlessly, sit back and
enjoy the moment with
the sounds of **SLOUCH**.

Scan to listen



Design with intent. This is **SLOUCH**.

We've been designing and
manufacturing quality british
furniture for over 45 years.

As lovers of design, we constantly seek
new inspiration to develop products that
not only look great but feel great too. We
present a new era of work-life where every
day works for you.

Challenging the conventions of traditional
home office furniture, this is life without
limitations.

@weareslouch

Safety Information.

Please observe all safety instructions.

01

Unplug the power cord in case of smoke, smell or unusual noise.

02

A minimum gap of 25mm must be present from the edge of the work surface to adjacent objects. This includes organisational elements and building structure.

03

Make sure no objects or parts of the body get caught when operating the motor.

04

The work surface must not be adjusted in height if other people are located directly in its location.

05

Do not place any objects or parts of the body between fixed or movable parts.

06

In the case of hitting an obstacle, slight damage (scratching, pressure marks, etc.) to such obstacles may occur.

07

Never open the enclosure of the control unit or power supply. Unauthorised opening of the enclosure or improper repairs may endanger the user and voids all warranty claims.

08

Only professionals authorised by the manufacturer may carry out installation, maintenance or repair.

09

This product must be cleaned with a damp cloth only.

10

This product should not be used by children.

11

The manufacturer assumes no liability for damage resulting from improper use.

12

Plugs and connections must be located in such a way that no fluids come into contact with electrical equipment.

13

The power cable must be secured. Interconnecting cables may be run loosely. All lines and cables must be run in such a manner as to avoid mechanical damage (i.e. shearing, abrasion).

14

Cables must be sufficiently long enough to allow height adjustment without damaging the cables and wiring (i.e., stretching, crushing).

15

The operation of the control mechanism and the power supply unit requires a minimum of 0°C and a maximum temperature of 40°C.

16

Do not use in an explosive environment.

17

Do not install the control unit:

- Above or in front of heat sources (e.g. radiators)
- In small, unventilated or humid rooms
- Near easily flammable materials, or near high-frequency devices (e.g. transmitters or similar devices)

Control Panel.

Improper operation of the system may result in personal injury, injury to others, and cause damage to objects!

 
The up/down buttons are 'push-to-operate' and will only function when connected to power, assembled correctly and the control box has been initialised. The distance of travel is defined by the control box.

For every two minutes of constant use, the control box requires 18 minutes of non operation.



Safety at the desk.

The user must ensure that the space around the adjustable top is clear before use. As mentioned previously a 25mm gap must be present with any ancillary objects. This avoids any pinch or crushing points.

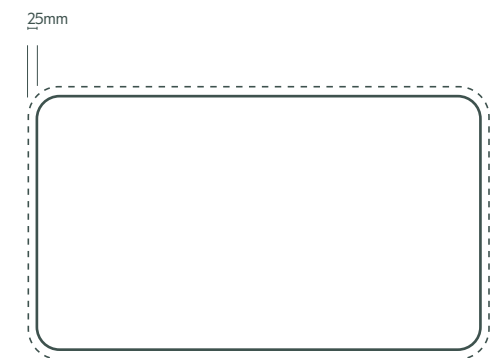

Control Panel Guide.

Please observe all safety instructions.


 
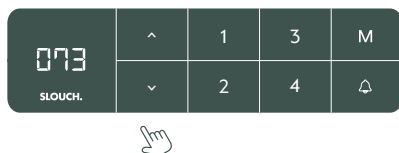 


Table Height Adjustment

 Press up ^ or down v to raise or lower the table to the preferred table height.

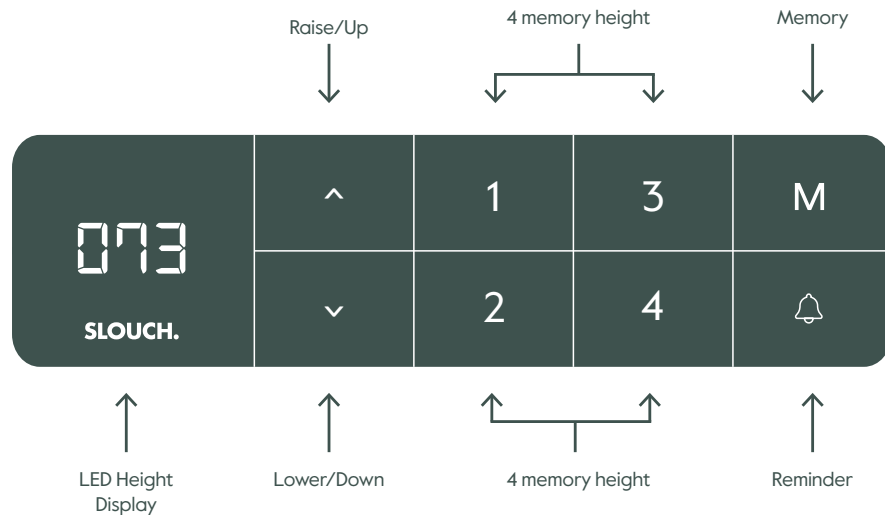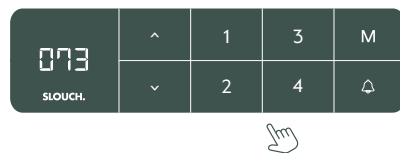

Memory Presets

 
At the preferred table height, press the "M" button, the display will then flash "S-", continue by pressing 1, 2, 3, or 4 to set the memory.



Use of Memory Buttons

Briefly press a button (1 - 4) and release, the table will move to the saved height.


⚠ Table adjustment stops by pressing any button on the control pad.



Reset the Control Pad

When the display shows 'A5T' press and hold the down button for 10 to 15 seconds, until the table moves up and down slightly.

 ⚠ Objects under the table should be removed before the reset operation to prevent damage.



Use of Reminder Button

1. Press the 🔔 button, the display will read 0.0h.
2. Press the ^ or v button to adjust the reminder time. Each press changes by 0.5 hours, with a maximum of 9.0 hours.
3. If the button is not operated for 2 seconds, the timer will automatically start.
4. When the timer is up, the controller will automatically wake up and the buzzer will sound 5 times.
5. To turn it off, set the reminder time to 0.0h.

Protection Messages

HOT

Overheating protection is triggered. Stop adjustment immediately; wait for 18 minutes or unplug the desk for 15 seconds then plug it back in.

E8

There is a tilt while the desktop is running, please reinitialise.

E11

Motor 1 is unconnected, please check connection.

LOC

Internal error in the control unit. To unlock the desk, keep pressing the up and down buttons together until the LOC disappears.

E13

The phase line is disconnected, please check the motor for abnormal connection.

E14

The motor 1 hall line is disconnected, please check the hall signal or replace the connection.

8.8.8

Bad Connection. Check that the handset and control box are correctly plugged in, if the issue still occurs, please change the handset or control box.

E16

Motor 1 is shut off, please reinitialise

BLANK SCREEN

Bad connection. Check that the handset and control box are correctly plugged in, if the issue still occurs, please change the handset or control box.

E21

Motor 2 is not connected, please check connection.

E23

Motor 2 lacks phase/ the phase line, please check the motor for abnormal connection.

E4

Hand controller communication error. Check the manual line.

E24

Motor 2 hall line is disconnected, please check the hall signal or replace the connection.

E6

Main power start failed. Check the main power connection, if the issue still occurs, please replace the main power supply.

E26 / E36 / E43

Motor 2 is shut off, please reinitialise.

E7

Message appears for protection while the main power is running. Please power up again.

E42

There is a memory error, please replace the controller.

Clearance when in operation.

It is the users responsibility to ensure the space below the adjustable work surface is hazard and risk free before operation.

- Keep your distance from the table when adjusting the height.
- Do not place any items underneath the table when adjusting the height.
- Be aware of other people at the table during operation.



Reset

Please note if power is disconnected or lost the control unit will have to be reset.

 
Press and hold the down button for 10 to 15 seconds, until it stutters and beeps.

If nothing happens, unplug the power and all cables from the Control Box and try again. Check to ensure that the correct cables are seated within the inputs.



Overloading

The maximum load to be applied to the worksurface during operation is 70kg.

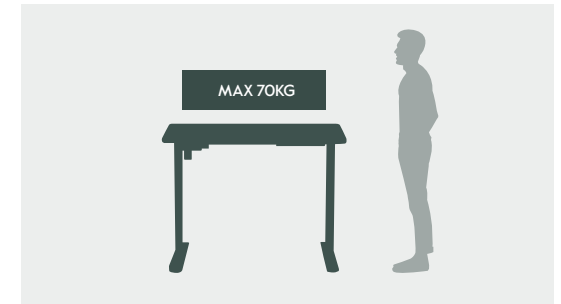


Noise Emission

The noise emission when in operation is approximately 50DB.



CE Sticker

 Manufacturer, Address, Model, Year of Manufacture, WEEE Symbol and CE marking can be seen on the document holder (where this document is stored) on the underside of every work surface.

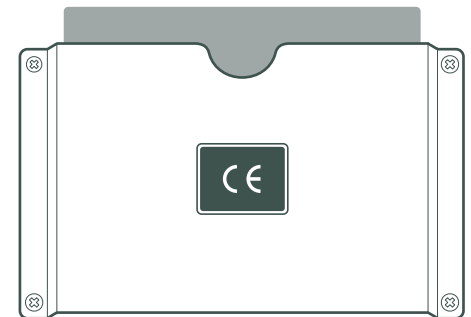

Troubleshooting

FAULT	CAUSE	REPAIR
Desk does not move	No power supply	Plug in mains cable; If applicable, check the plug connector on the controller
	No connection or loose connection to the drives	Check if plug connection from the motor cable to the controller box and the drives is secure
	No connection to the hand-switch	Check connection of handset to control unit is secure
	Max. lifting capacity is exceeded	Reduce weight or load on the desktop
	Defective drive	Contact customer service
	Defective control unit	Contact customer services
	Hand set is defective	Replace handset
Desk lowers slowly	Controller expects a re-initialization	See control box reset instructions on page 08
Desk operates slowly	Max. lifting capacity is exceeded	Check connection of handset to control unit is secure
Desk moves on one side only then briefly stops	No connection or loose connection to the drives	Check if plug connection from the motor cable to the controller box and the drives is secure
	Defective drive	Contact customer services

Data

Input Voltage	230V
Output Voltage	29V
Anti Collision	Yes, sensitivity is 3-3 4-3
Ambient temperature during operation	0°C – 40°C
Travel from software	NO
Permissible relative humidity (for operation)	20% - 90%
Number of actuator controlled	1
Flammability Rating	V-0
Maximum operating time	Run for 2 mins, rest for 18 mins
Nominal lift speed of the drive columns	25mm/s
Certification	CE, UKCA, GS, CE

CE Declaration of Conformity.

For the purposes of the EC Machinery Directive 2006/42/EC, Annex II.

We hereby declare that the device identified below, in the version supplied to the market by us, complies with the EC directives listed below. In the event of a modification or improper use, that has not been agreed with us, this declaration shall become invalid.

Meets the following EC-Directives and Standards:

Directives

EN 527-2:2016+A1:2019
EN ISO 12100:2010

The Senator Group
Altham Business Park, Sykeside Drive,
Accrington BB5 5YE

Standards

EN 60335-1:2012
A11:2014
A13:2017
A1:2019
A4:2019
A2:2019
A15: 2021
EN 62233:2008

Declares that the following product:

Height Adjustable Desk

Description - An electric desk that has a single height adjustable top. This includes variations and optional equipment referred to in the price list.

The current version of the standard on the date of issue shall always apply.

This documents must not be made available to third parties without the permission by the person responsible for the release of documents.

This declaration document was authorised and signed digitally by: Kirk Marsden, Product Development Manager.



GET IN TOUCH —
info@slouchonline.com

BE SOCIAL —
[@weareslouch](#)
slouchonline.com